

# Micro Ohmmeter RMO100G

- Lightweight only 8 kg
- Powerful 5 A 100 A DC
- Measuring range 0 999,9 mΩ
- Resolution to 0,1 μΩ
- SINGLE / CONTIN Mode
- True DC current



# High DC current resistance meter

# **Description**

RMO100G is a Micro Ohmmeter based on a state of the art technology, using the most advanced switch mode technique available today. RMO100G generates a true DC ripple-free current with automatically regulated test ramps. During a test the RMO100G ramps with increasing current before measuring and decreasing current after the measurement. This eliminates magnetic transients. After the test current has been set, the automatic test procedure is started by pressing the  $\Omega$ -button.

The RMO100G instrument can store internally up to 500 measurements. All measurements are time and date stamped. Using the DV-Win software a test can be performed from a user's PC, and the results can be obtained directly on the PC. Communication between the RMO100G and a PC is through an USB (as standard) or an RS232 cable (as an option). Using the DV-Win the result can be arranged as an Excel spreadsheet which can be later shown as a diagram and printed for a report.

The set is equipped with a thermal and an overcurrent protection. The RMO100G has a very high ability to cancel electrostatic and electromagnetic interference in HV electric fields. It is achieved by very efficient filtration. The filtration is made utilizing a proprietary hardware and software.

# **Output Ratings**

The full output is available from the RMO100G at 230 V Mains Supply. A reduced output is available from lower supply voltages.

Supply Voltage	Output Current	Full Load Voltage
230 V AC	100 A DC smoothed	7,15 V DC
115 V AC	100 A DC smoothed	6,80 V DC

Output current is filtered and has a ripple of less than 1 %. The RMO100G current output is rated at 100 A for 5 minutes at 25 °C ambient temperature.



# **CONTIN Mode**

RMO100G can generate a DC current continuously using the CONTIN menu. In this menu the current can be chosen the same way as in the SINGLE menu, but the duration of the test can be preset. The test is started pressing the  $\Omega$ -button. During the test, a new result is shown on the display and stored into the PC (DV-Win) each second. Using DV-Win the result can be arranged as an Excel spreadsheet which can be later shown as a diagram and printed for a report.

### **Application**

Typical application is measuring resistance of:

- High, middle and low voltage circuit breakers
- High, middle and low voltage disconnecting switches
- High-current bus bar joints
- Cable splices
- Welding joints

### Accessories

#### Included

- DV-Win PC software
- Ground cable
- USB cable

### Recommended

- Current cables 2 x 5 m 16 mm<sup>2</sup> with battery clips
- Sense cables 2 x 5 m with alligator clips
- Cable bag

# **Optional**

- Built-in thermal printer
- Thermal paper roll
- Both Sides Grounded Unit
- Test shunt 600 A / 60 mV
- Current cables 2 x 10 m 16 mm<sup>2</sup>
- Current cables 2 x 15 m 25 mm<sup>2</sup>
- Extension cable 2 x 10 m 25 mm<sup>2</sup>
- Sense cables 2 x 10 m with alligator clips
- Sense cables 2 x 15 m with alligator clips
- Cable plastic case







**Current cables** 



**Extension cable** 



**Test shunt** 



Cable bag




Current clamp 30/300A + cable set 5 m



# Connecting a Test Object to RMO100G

With RMO100G turned off, connect RMO100G to the test object ( $R_X$ ) in such a way that the measuring cables from the "Voltage Sense" sockets are attached as close as possible to  $R_X$ , and in between the current feeding cables. That way, a resistance of both cables and clamps is almost completely excluded from the resistance measurement.



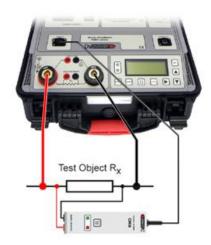


### **Remote Control Unit**

The RMO Remote Control Unit is an optional control unit that is used to start and stop the tests from a remote location, away from the actual RMO.

Provided that, for a series of tests, the same test current is fed through the test object, multiple measurements can be carried out

#### **Both Sides Grounded Unit**

Using RMO100G with both sides grounded option it is possible to make safer measurement of breakers with both terminals of the breaker grounded. Measuring the current through the ground connection and reducing this value from the total current is an additional safety feature.

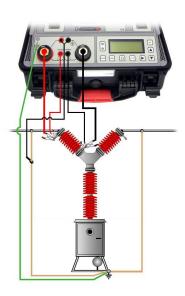

B-RMO100GN-200-EN RMO100G Brochure 3



#### **Technical Data**

### 1 - Mains Power Supply

Connection according to IEC/EN60320-1; C320
Voltage 90 V - 264 V AC, 50 / 60 Hz, single-phase

- Power consumption 1160 VA

- Fuse 12 A / 230 V, type F

# 2 - Output data

- Test current 5 A – 100 A DC

- Measuring range / Resolution

 $\begin{array}{cccc} 0.1 \; \mu\Omega - 999.9 \; \mu\Omega & 0.1 \; \mu\Omega \\ 1000 \; \mu\Omega \; - 9999 \; \mu\Omega & 1 \; \mu\Omega \\ 10,00 \; m\Omega - 99,99 \; m\Omega & 10 \; \mu\Omega \\ 100.0 \; m\Omega \; - 999.9 \; m\Omega & 0.1 \; m\Omega \end{array}$ 

- Typical accuracy  $\pm$  (0,1 % rdg + 0,1 % FS)

#### 3 - Environment conditions

- Altitude below 2000 m

- Temperature -10 °C +55 °C / 14 °F +131 °F
- Maximum relative humidity 95 % for temperatures up to 31 °C, decreasing linearly to 40 % relative humidity at 55 °C
- Mains supply voltage fluctuations up to ±10 % of the nominal voltage
- Installation/overvoltage category II
- Pollution degree 2

# 4 - Dimensions and Weight

- Dimensions 405 mm x 170 mm x 335 mm

16 in x 6,7 in x 13,2 in (W x H x D) without handle

- Weight 8 kg / 17,6 lb

**5 - Warranty** three years

### 6 - Safety Standards

- European standards EN 61010-1

LVD 2006/95/EC

- International standards IEC 61010-1

UL 61010-1

CAN/CSA-C22.2 No. 61010-1, 2<sup>nd</sup> edition, including Amendment 1

# 7 - Electromagnetic Compatibility (EMC)

- CE conformity EMC standard 89/336/EEC

EMC directive 2004/108/EC

- Emission EN 61326-1 - Interference Immunity EN 61326-1

All specifications herein are valid at ambient temperature of + 25 °C and recommended accessories. Specifications are subject to change without notice.

IBEKO Power AB

Contact

phone: +46 70 0925 000 sales@dv-power.com

Address

Stockholmsvägen 18 181 33 Lidingö, Sweden